

Camshaft, Checking Adjustment

The adjustment of intake camshaft is load- and RPM dependent. Oil pressure is switched to the respective camshaft adjuster (mechanical adjustment devices) via the solenoid valve for camshaft adjustment.



Note

Camshaft adjustment is active only 25 seconds after engine start.